

Manual Radar Standalone




Kit contents



Control unit relè



Radar lane/maneuver

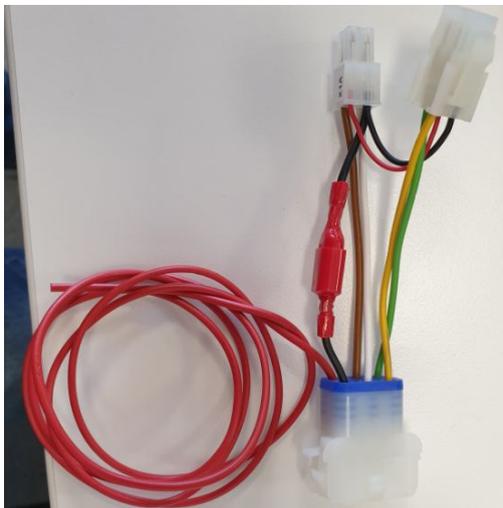

A^




Cable kit

A^ =Unlike the old one that on the black wire (the negative) there is the possibility to disconnect it.

Placement

Install the radar at the point of the machine to be protected. Lane radar can be used on all types of machines.

When positioning, keep in mind that the radar detects obstacles through a very thin and directional "blade", pay attention to the height and mounting angle.

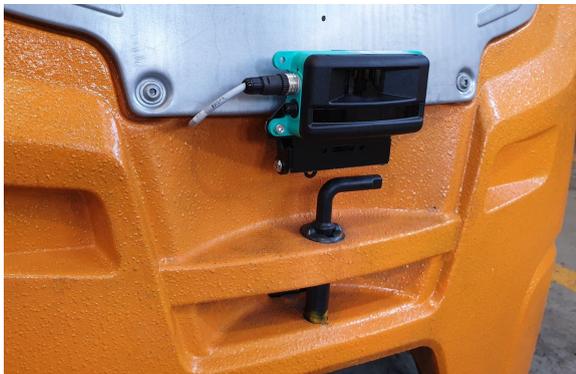

Electrical connection

Connect the red wires to a 12 / 24V power source.

The system can be equipped with one or more sensors connected to the same wiring with chain link .



For this reason it is always necessary to insert the closing connector (male connector with two black jumper wires) on the female socket which remains free.

Connection diagram

